


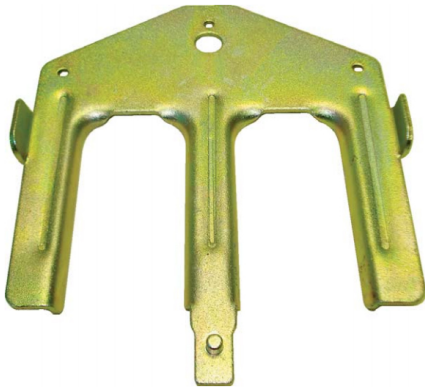

WB2X6

Installation:

1. Fasten Double Waler Bracket to the studs with double headed nails through the three nail holes provided in the bracket.
2. Insert walers.
3. Secure with Snap Tie Steel Wedge on the steel pin of the Double Waler Bracket.

Part Number	WB2X6
Weight Per Piece (lbs)	1
Carton Quantity	25
Size	(2 x 6)