


Precast Utility Anchors

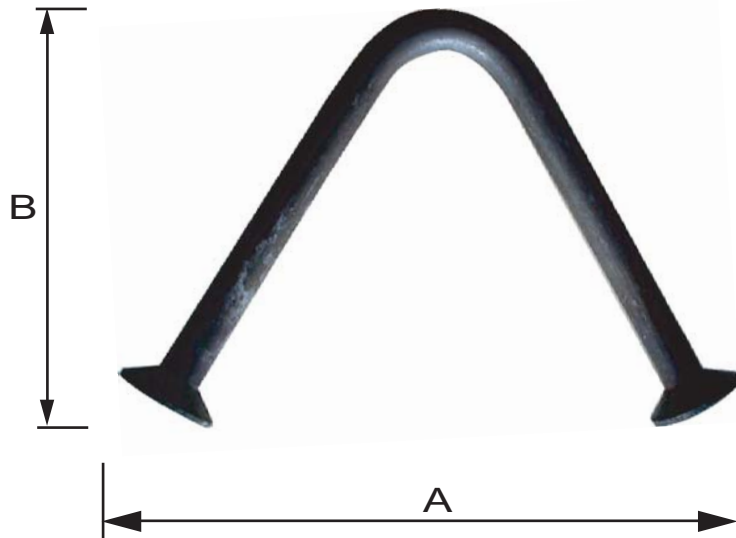

To Order
(Call, Fax or e-mail this form)

1. Part No. : _____

2. Size : _____

3. Quantity : _____

Phone : 1-866-457-5710

Fax : 1-847-541-9338

e-mail : sales@ocm-inc.com

OCM Part No.	A	B	Minimum Panel Thickness		Safe Working Tension Load		Safe Working Shear Load	
			90°	45°	90°	45°	90°	45°
UA4444	5-1/4"	3-1/8"	4"	3-1/2"	1,125	795	1,725	795
UA5444	9-3/8"	3-3/4"	5"	4-1/4"	3,000	2,100	6,750	2,100
UA6444	7-3/8"	4-3/4"	5-5/8"	4-1/4"	4,000	2,825	9,000	2,825
UA5671	9-1/2"	3-3/4"	5"	4-1/4"	3,750	2,650	7,500	2,650
UA6671	7-3/8"	4-3/4"	5-5/8"	4-1/4"	5,000	3,525	10,000	3,525
UA8671	9-3/4"	6-3/4"	7-5/8"	6"	10,000	7,075	12,000	7,075

SWL provides a safety factor of approximately 4 to 1.